
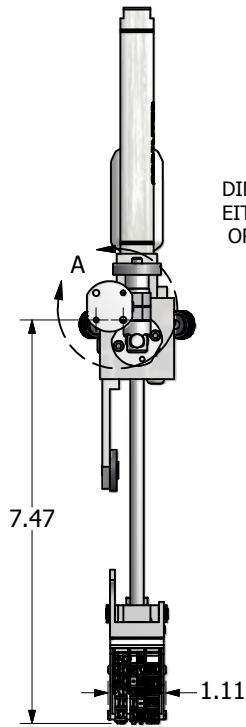



BASIC MOUNTING DIMENSIONS IN INCHES

VERSATILE MOUNT BRACKET


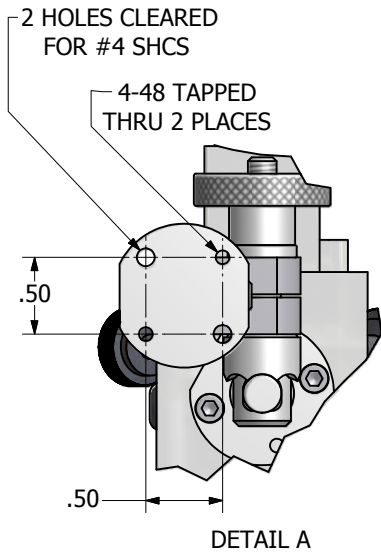


SPRINTER MODEL 88 EH1

DIMENSIONS APPLY TO EITHER SIX BAND HEAD OR DATE BAND HEAD

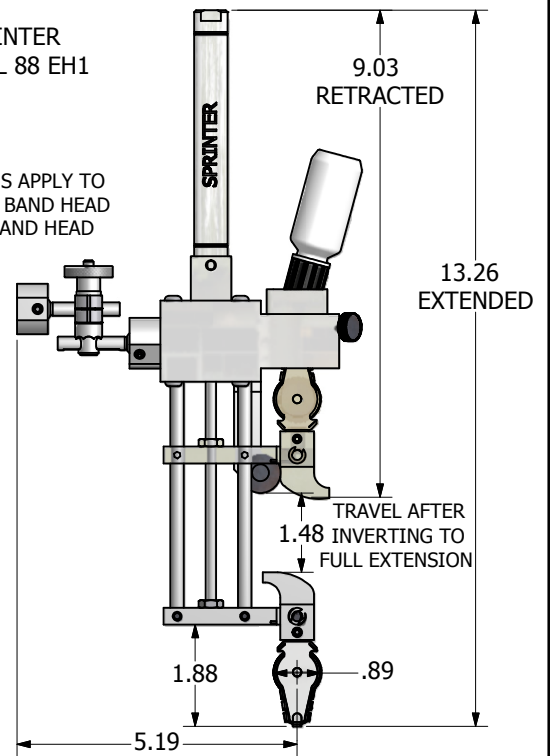

RELATIVE POSITIONING BRACKET

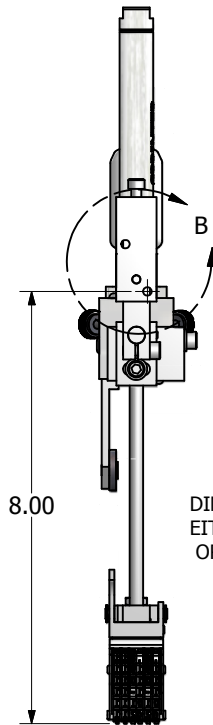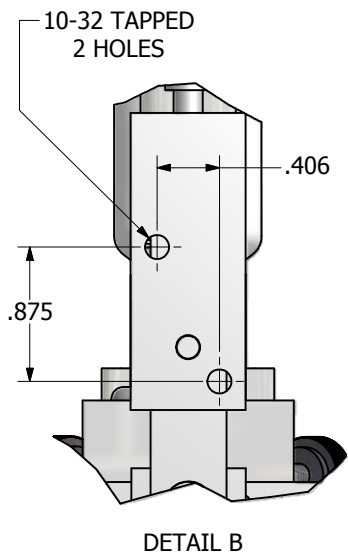

SPRINTER MODEL 88 EH1

DIMENSIONS APPLY TO EITHER SIX BAND HEAD OR DATE BAND HEAD

